

# INSTALLATION GUIDE

## Draw wire sensors series SX50, SX80, SX120

For further information please see the data sheet at [www.waycon.biz/products/draw-wire-sensors](http://www.waycon.biz/products/draw-wire-sensors)

### FIRST STEPS

WayCon Positionsmesstechnik GmbH would like to thank you for the trust you have placed in us and our products. This manual will make you familiar with the installation and operation of our draw wire sensors. Please read this manual carefully before initial operation!

Unpacking and checking:

Carefully lift the device out of the box by grabbing the housing. Do not pull the rope. After unpacking the device, check it for any visible damage as a result of rough handling during the shipment. Check the delivery for completeness.

If necessary consult the transportation company, or contact WayCon directly for further assistance.

### MOUNTING OF THE SENSOR

- Mount the sensor at the designated place by using the fixing holes before extracting the rope and before attaching the rope to the measuring target.
- The sensor is usually installed by using the regular mounting plate. By disassembling the mounting plate, threads will become visible in the sensor housing for alternative installation. Sensors with option rope outlet S2 and S3 have a modified base plate.
- Open the rope clip after the sensor is fully mounted and carefully extract the measuring rope. Hook the rope clip on the measuring target and close the bracket of the clip. For safety reasons put a screw driver through the clip to extract the rope.

### HANDLING THE WIRE ROPE

- When installing or operating the sensor, take care not to let the rope snap back by mistake or extract the rope over the specified measurement range, as this might destroy the sensor.
- The rope must be extracted from the sensor vertically. The maximum variation from the vertical is 3°. Avoid extracting the rope at an inclination, since the durability of the instrument would shorten considerably. If it is not possible to keep the limit of 3°, a deflection pulley has to be used.
- Guide the rope preferably in corners or guarded in channels to prevent pollution or accidental touch.
- Avoid guiding the rope over edges or corners. Use a deflection pulley instead.
- Do not operate the sensor if the rope is buckled or damaged. A ripping of the rope may lead to injuries or a damaging of the sensor.




# MOUNTING


## Mounting standard rope outlet, rope outlet sideways top (S1)

The sensor is usually installed by using the regular mounting plate. By disassembling the mounting plate, there are threads in the sensor housing for alternative installation:


**SX50:** 2 x M3 und 2 x M5

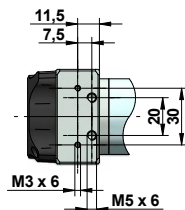

**SX80:** 2 x M4

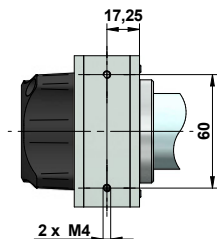


**SX120:** 2 x M4

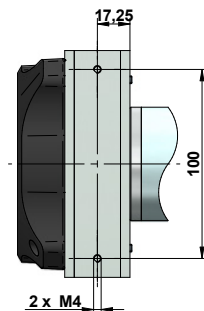


## Mounting rope outlet sideways bottom (S2), rope outlet bottom (S3)

Sensors with option rope outlet S2 and S3 have a modified base plate:


**SX50**

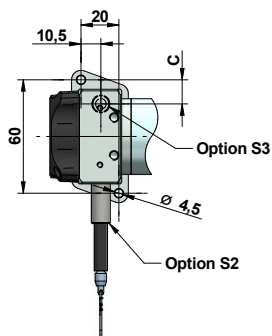

**SX80**

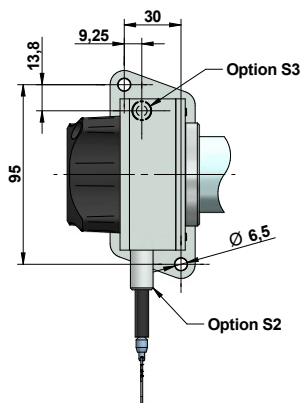


**SX120**

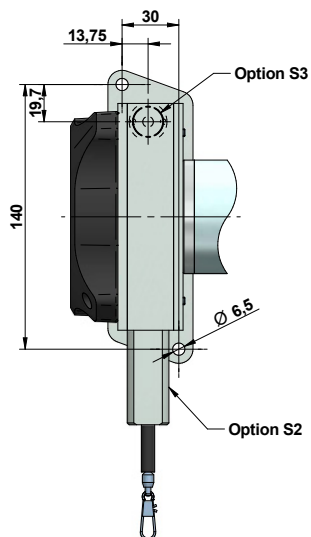

Measurement range [mm]	Option	C
50 / 150 / 250	Standard	21.3
75 / 225 / 750	Standard	17
100 / 300 / 500 / 1000	Standard	12.75
125 / 375 / 625 / 1250	Standard	10,3

## ELECTRICAL CONNECTION ANALOG OUTPUT

Cable output cable colours	Connector output M12, male	1 k $\Omega$	0...10 V	4...20 mA	0...5 V, 0...10 V (teachable)
BN	Pin 1	+V	+V	+V	+V
WH	Pin 2	Cursor	Signal	n. c.	Signal
BU	Pin 3	GND	GND	Signal	GND
BK	Pin 4	n. c.	GND <sub>Signal</sub>	n. c.	MFL <sup>1)</sup>

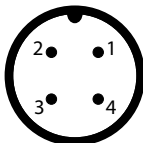


<sup>1)</sup> Multi-functional line

## ELECTRICAL CONNECTION INCREMENTAL OUTPUT


### SX50, SX80, SX120: Connector output M12, male, 8 pins

Signal	GND	+V	A	/A	B	/B	Z	/Z
Pin	1	2	3	4	5	6	7	8

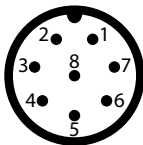

### SX80, SX120: Connector output M23, male, 12 pins

Signal	GND	+V	A	/A	B	/B	Z	/Z	GND <sub>sens</sub>	+V <sub>sens</sub>	n. c.
Pin	10	12	5	6	8	1	3	4	11	2	7, 9

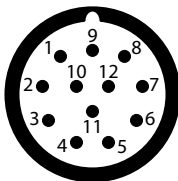

### SX50, SX80, SX120: Cable output

Signal	GND	+V	A	/A	B	/B	Z	/Z	GND <sub>sens</sub> <sup>1)</sup>	+V <sub>sens</sub> <sup>1)</sup>
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	GY-PK	RD-BU

<sup>1)</sup> SX80 and SX120 only

ELECTRICAL CONNECTION SSI

SX50: Cable output <sup>1)</sup>

Signal	GND	+V	C+	C-	D+	D-	SET	DIR	Status	H
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	VT	shield


SX80, SX120: Cable output <sup>1)</sup>

Signal	GND	+V	C+	C-	D+	D-	SET	DIR	Status	H
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	BK	shield

<sup>1)</sup> isolate unused wires individually before initial start-up


SX80, SX120: Connector output M12, male, 8 pins

Signal	GND	+V	C+	C-	D+	D-	SET	DIR	H
Pin	1	2	3	4	5	6	7	8	shield

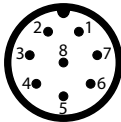

SX80, SX120: Connector output M23, male, 12 pins

Signal	GND	+V	C+	C-	D+	D-
Pin	1	2	3	4	5	6
Signal	SET	DIR	Status	n. c.		H
Pin	7	8	9	10, 11, 12		shield

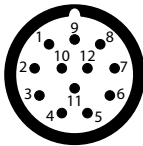



ELECTRICAL CONNECTION CAN<sup>OPEN</sup>

SX50: Cable output <sup>1)</sup>

Signal	GND	+V	CAN_L	CAN_H	CAN_GND
Cable colour	WH	BN	YE	GN	GY

SX80, SX120: 2 x Connector output M12

	Bus OUT (female)					Bus IN (male)				
Signal	GND	+V	CAN_L	CAN_H	CAN_GND	GND	+V	CAN_L	CAN_H	CAN_GND
Pin	3	2	5	4	1	3	2	5	4	1

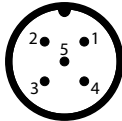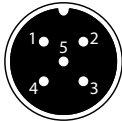

SX80, SX120: cable gland radial (removable bus terminal cover)

	Bus OUT					Bus IN				
Signal	GND	+V	CAN_L	CAN_H	CAN_GND	GND	+V	CAN_L	CAN_H	CAN_GND
Acronym	0 V	+V	CL	CH	CG	0 V	+V	CL	CH	CG

<sup>1)</sup> isolate unused wires individually before initial start-up




# ELECTRICAL CONNECTION PROFIBUS

## SX50, SX80, SX120: cable gland radial (removable bus terminal cover)

	Bus IN				Bus OUT			
Signal	B	A	GND	+V	GND	+V	B	A
Terminal	1	2	3	4	5	6	7	8

The shield of the connection cable must be connected over a large area via the cable gland.

## SX50, SX80, SX120: 3 x Connector output M12

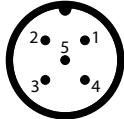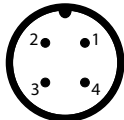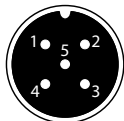Bus IN (male)	Signal	n. c.	PB_A	n. c.	PB_B	shield	
	Pin	1	2	3	4	5	
Power supply (male)	Signal	+V	n. c.	GND	n. c.	-	
	Pin	1	2	3	4	-	
Bus OUT (female)	Signal	BUS_VDC <sup>1)</sup>	PB_A	BUS_GND <sup>1)</sup>	PB_B	shield	
	Pin	1	2	3	4	5	


<sup>1)</sup> for supplying an external Profibus termination resistor

# ELECTRICAL CONNECTION ETHERCAT, PROFINET


## SX50, SX80, SX120: 3 x Connector output M12

Bus IN or Bus 1	Signal	Transmit data +	Receive data +	Transmit data -	Receive data -
	Acronym	TxD+	RxD+	TxD-	RxD-
	Pin	1	2	3	4
Power supply	Signal	Voltage +	n. c.	Voltage -	n. c.
	Acronym	+V	n. c.	0 V	n. c.
	Pin	1	2	3	4
Bus OUT or Bus 2	Signal	Transmit data +	Receive data +	Transmit data -	Receive data -
	Acronym	TxD+	RxD+	TxD-	RxD-
	Pin	1	2	3	4


Bus IN D-coded  
(female)

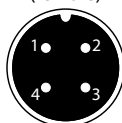

Power supply  
(male)

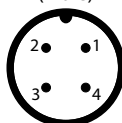


Bus OUT D-coded  
(female)

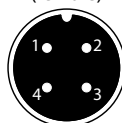



# ACCESSORIES CABLE

## Analog output and power supply Profibus, EtherCat and Profinet

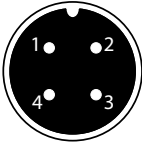
Cable with mating connector M12 (female), 4 poles			Pin	Cable colour
K4P2M-S-M12	2 m, straight connector, IP67, shielded		1	BN
K4P5M-S-M12	5 m, straight connector, IP67, shielded		2	WH
K4P10M-S-M12	10 m, straight connector, IP67, shielded		3	BU
K4P2M-SW-M12	2 m, angular connector, IP67, shielded		4	BK
K4P5M-SW-M12	5 m, angular connector, IP67, shielded			
K4P10M-SW-M12	10 m, angular connector, IP67, shielded			

## Incremental output

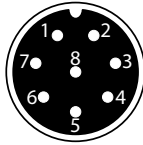Cable with mating connector M12 (female), 8 poles								
K8P2M-S-M12	2 m, straight connector, IP67, shielded							
K8P5M-S-M12	5 m, straight connector, IP67, shielded							
K8P10M-S-M12	10 m, straight connector, IP67, shielded							
K8P2M-SW-M12	2 m, angular connector, IP67, shielded							
K8P5M-SW-M12	5 m, angular connector, IP67, shielded							
K8P10M-SW-M12	10 m, angular connector, IP67, shielded							
Pin	1	2	3	4	5	6	7	8
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD

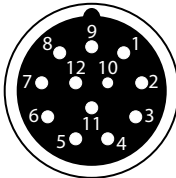Cable with mating connector M23 (female), 12 poles												
K12P2M-S-M23	2 m, straight connector, IP67, shielded											
K12P5M-S-M23	5 m, straight connector, IP67, shielded											
K12P10M-S-M23	10 m, straight connector, IP67, shielded											
K12P2M-SW-M23	2 m, angular connector, IP67, shielded											
K12P5M-SW-M23	5 m, angular connector, IP67, shielded											
K12P10M-SW-M23	10 m, angular connector, IP67, shielded											
Pin	1	2	3	4	5	6	7	8	9	10	11	12
Cable colour	PK	RD-BU	BU	RD	GN	YE	-	GY	-	WH	GY-PK	BN

## Digital output SSI:

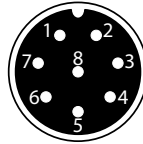Cable with mating connector M12 (female), 8 poles								
K8P2M-S-M12	2 m, straight connector, IP67, shielded							
K8P5M-S-M12	5 m, straight connector, IP67, shielded							
K8P10M-S-M12	10 m, straight connector, IP67, shielded							
K8P15M-S-M12	15 m, straight connector, IP67, shielded							
Pin	1	2	3	4	5	6	7	8
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD

## ACCESSORIES CABLE

### Digital output SSI:


#### Cable with mating connector M23 (female), 12 poles

K12P02M-S-M23-SSI | 2 m, straight connector, shielded

K12P05M-S-M23-SSI | 5 m, straight connector, shielded

K12P10M-S-M23-SSI | 10 m, straight connector, shielded

K12P15M-S-M23-SSI | 15 m, straight connector, shielded

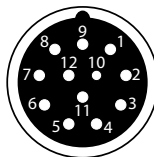


Pin	1	2	3	4	5	6	7	8	9	10	11	12
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	BK	VT	GY-PK	RD-BU

### Digital output CANopen:

#### Cable with mating connector M12 (female), 5 poles

K5P2M-B-M12-CAN | 2 m, straight connector, shielded


Pin	1	2	3	4	5
Cable colour	shield	RD	BK	WH	BU

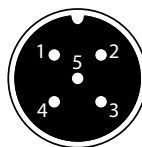

#### Cable with mating connector M12 (male), 5 poles

K5P2M-S-M12-CAN | 2 m, straight connector, shielded

Pin	1	2	3	4	5
Cable colour	shield	RD	BK	WH	BU

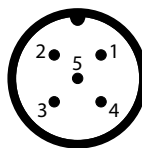


### Digital output Profibus (Bus In / Bus Out):

#### Cable with mating connector M12 (female), 5 poles

K5P2M-B-M12-PROF | 2 m, straight connector, shielded


Pin	1	2	3	4	5
Cable colour	-	GY	-	RD	-

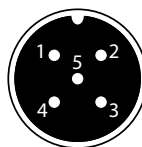

#### Cable with mating connector M12 (male), 5 poles

K5P2M-S-M12-PROF | 2 m, straight connector, shielded

Pin	1	2	3	4	5
Cable colour	-	GY	-	RD	-

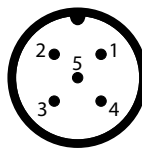


### Digital output EtherCat and Profinet (Bus In / Bus Out):

#### Cable with mating connector M12 (female), 4 poles

K4P2M-S-M12-CAT | 2 m, straight connector, shielded

K4P5M-S-M12-CAT | 5 m, straight connector, shielded

K4P10M-S-M12-CAT | 10 m, straight connector, shielded

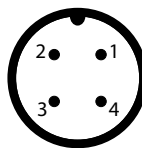

Pin	Cable colour
1	YE
2	WH
3	OG
4	BU

